



CORDLESS MATTRESS VACUUM CLEANER

INSTRUCTION MANUAL

Please read the Manual carefully before use, and keep it properly.

Abnormalities Handling

If the product is found to be abnormal during use, please refer to the table below.

Abnormalities	Possible causes	Treatment methods
The appliance doesn't work	<ul style="list-style-type: none"> - The battery power is low - The charging socket plug is not plugged in fully or the socket is not energized - The switch button is not pressed - The appliance is not charged properly as indicated 	<ul style="list-style-type: none"> - Check whether the battery of the whole machine is charged fully - Check whether the plug is plugged in fully or the socket is energized - Press the switch button - Place the appliance correctly and do charging as required by the charging instructions
Weakened suction	<ul style="list-style-type: none"> - Too much dust in the dust cup - The filter cotton of the dust cup is blocked - The cyclone cone of the dust cup blocked - Air duct of the suction port is blocked - The filter cotton is not fully dried after washing 	<ul style="list-style-type: none"> - The dust is cleaned up in time - The filter cotton is cleaned - The cyclone cone is cleaned - The suction port is cleaned <p>After washed by water, the filter cotton is dried in a cool place.</p>
UV light does not work	<ul style="list-style-type: none"> - The appliance is too far from the objects to be cleaned - The appliance is placed upright - The UV sensor light is covered with contaminant - The UV lamp tube is damaged 	<ul style="list-style-type: none"> - Under normal circumstances, the appliance automatically turns on the UV light when it is within 5cm of the object to be cleaned. - The tilt angle of the body is not more than 30° - Clean up the contaminants with a dry cotton cloth - Contact the after-sales department for replacement of lamp tube
The appliance suddenly stops	<ul style="list-style-type: none"> - Dust in the cup dust exceeds the maximum scale line - Air duct of the suction port is blocked - Filter cotton is blocked by foreign body 	<ul style="list-style-type: none"> - Clean up the dust cup in time - The suction port is cleaned - The filter cotton is cleaned
Cannot be charged	<ul style="list-style-type: none"> - The appliance is not charged properly as indicated - The ambient temperature is too high or too low in the case of charging 	<ul style="list-style-type: none"> - Place the appliance correctly and do charging as required by the charging instructions - The appliance is charged at a suitable temperature (5°C-40°C)

Safety Instruction


- Do not place the vacuum cleaner nearby the heat source, radiation or burning cigarettes. Do not collect the following objects:
 1. All liquids like the water and solvents.
 2. Construction dust and garbage like lime and cement ash, etc.
 3. Hot objects like the unextinguished carbon head or a cigarette end.
 4. Sharp fragments like glass, etc.
 5. Flammable and explosive articles like gasoline or alcohol products.
- Only authorized technicians are allowed to disassemble this product and it is strictly forbidden to disassemble this product by oneself.
- It is strictly forbidden to use this appliance by children, and people with disabilities or lack of common sense and experience in household appliances without the guidance of a special person!
- This appliance is an indoor household product, please do not use it outdoors.
- Your vacuum cleaner is an electric appliance: It must be used in accordance with normal conditions, and must not let the vacuum cleaner operate alone without supervision.
- Do not touch the power cord, socket or power adapter when your hands are wet.
- Please empty it before you use this product, when the dust box is filled with dust.
- The power must be turned off when the vacuum cleaner is cleaned, repaired and temporarily not used.
- Do not immerse the vacuum cleaner; avoid exposure to heating appliance or sunlight to avoid fire.
- This appliance can only be used with the original power adapter installed in the package. If other adapters are used, the appliance may be damaged.
- When taking out the battery, the appliance must be powered off; Do not disassemble the main battery by yourself. If you need to replace it, please contact the after-sales service personnel. Do not throw away it when the battery is abandoned.
- Do not touch the conductors of the pole pieces or the plug port to avoid short circuit.
- Cut off power: Do not pull the power cord. Hold the plastic part of the plug by hand and unplug the plug.
- The power cord of the vacuum cleaner should not pass through sharp objects to avoid damaging the power cord.
- Do not pull and drag the power cord to move the socket.
- Check whether the supply voltage must match with the charging voltage of the vacuum charger.
- Avoid running for a long time where the suction port is blocked, to avoid damage to the motor and heating or deformation of the vacuum cleaner.
- Do not use the vacuum cleaner in the case of following circumstance, and you promptly send it to the maintenance department as designated by the company for repair:
 1. The appliance falls off and there is significant damage or abnormal operation.
 2. The power cord is broken.

Prompt

1. Charging duration may be extended in the case of following circumstance a. The charging is made at room temperature above 30°C b. After the appliance stops, it is charged immediately.
2. No matter how long it is used, please charge it after cleaning.
3. In the case of not charging, it is recommended to unplug the power plug in time.
4. If your appliance is not used for a long time (more than 2 months), please unplug the power cord, but to ensure the battery life, the battery is fully charged every 2 months.
5. During the charging process, the body or the power adapter may be heated, which is normal. So please feel free to use it.

Product Introduction

Parts display

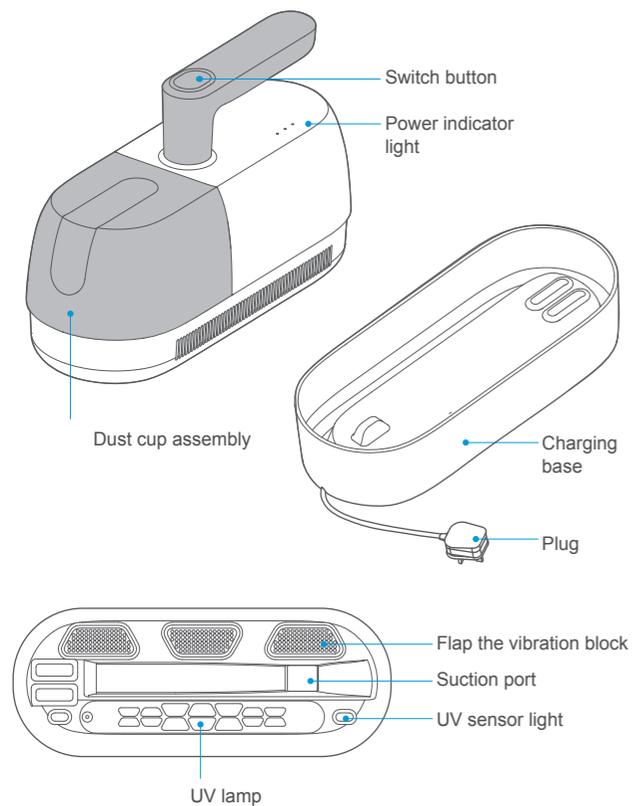

Function Operation


Battery status



Notes

Please place it following the arrows on the illustration to ensure proper charging.


State	Indicator light for battery status
In the charging	Flash once every second from left to right
Charging completed	The indicator light stays on for 10 minutes and then goes off
Power consumption	Decrease from right to left
Insufficient remaining power	The leftmost light flashes, which prompts charging

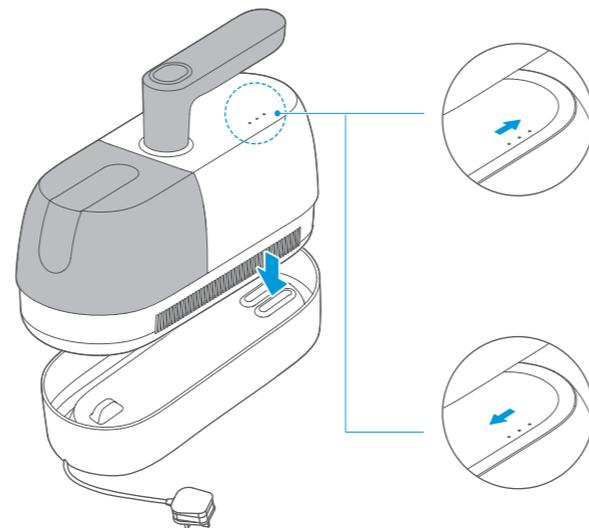

Function Operation

Sweeping


According to the area of the cleaned object, the user can adjust the handle to two directions such as vertical and horizontal directions. Press the switch button to push back and forth to achieve cleaning.

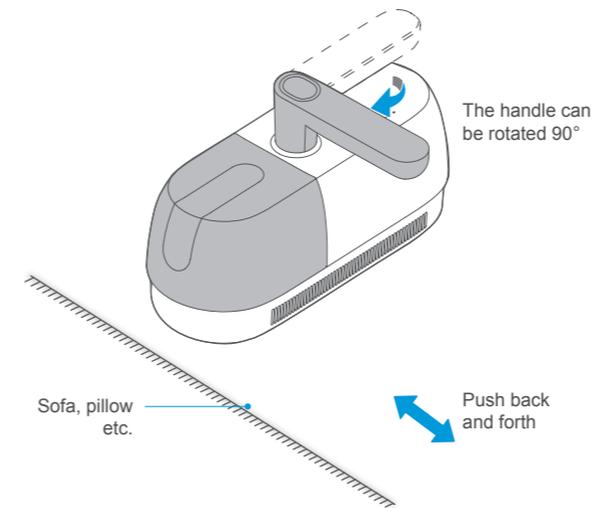


Cleaning and Maintenance

Dust cup cleaning

1. When the dust reaches the max scale line on the cup, the dust cup is taken out along the direction of the arrow.

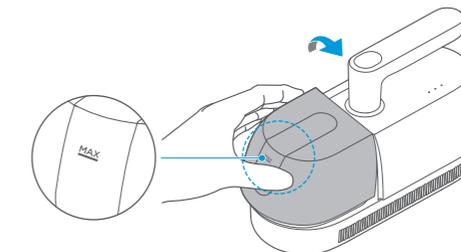


2. Above the trash can, take out the filter components and clean the dust.

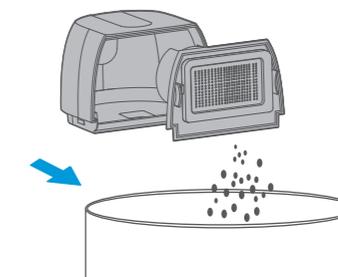


Cleaning and Maintenance

- Take down the filter cotton and the cyclone cone, as shown by the arrows.

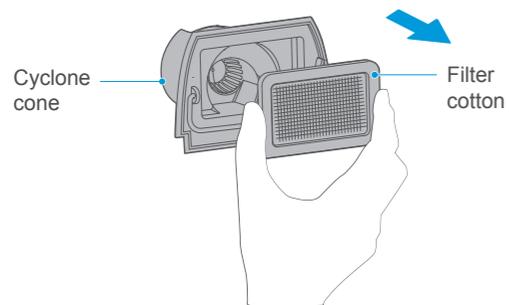

- Clean the dust cup: Flap the filter cotton (remember that not to flap in reverse direction).

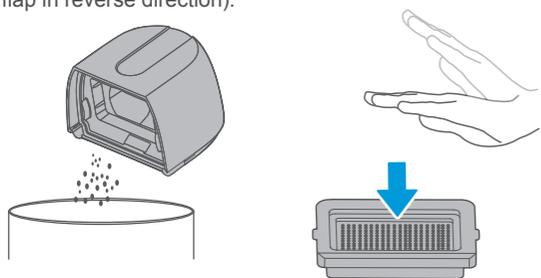


Cleaning and Maintenance

Parts cleaning

⚠ Notes

- Be sure to turn off the switch button before taking out the dust cup;
- Please pay attention to sharp objects like glass to prevent the machine from being scratched;
- All parts need to be completely dry before they can be installed.
- Do not wash or apply brute force to the filter cotton;
- Be sure to check whether the filter cotton is installed in place during assembly;
- Do not continue to use it when the filter cotton of the dust filter is damaged or the cleaning & maintenance cannot be restored.

After cleaned and dried thoroughly, all parts are assembled in the reverse order of the disassembly to prevent ash from leaking in the next use.

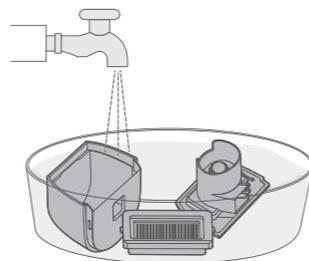

🔔 Prompt

It is recommended to perform the above cleaning work after each dust has been poured: After the filter cotton has been used for 30-50 hours accumulatively, if the suction drops seriously, the cleaning cannot be resumed. Please go to the designated place to purchase and replace it.


Cleaning and Maintenance

UV lamp cleaning

⚠ Notes

Before cleaning the UV lamp, be sure to turn off the switch of vacuum cleaner and unplug the power cord to prevent the vacuum cleaner from being wiped under running conditions.

A cross head driver is used to remove the UV lamp cover plate screws and take down the UV lamp cover plate. Gently wipe the surface of the UV lamp with a dry towel; After cleaning, assemble them in the reverse order of the disassembly.

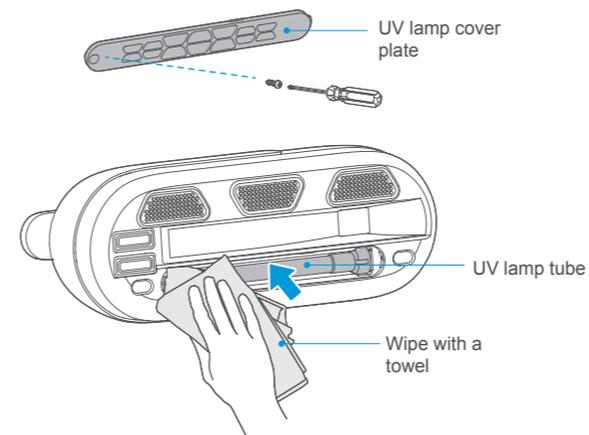

Specification

Model	B5D	Rated voltage	21.6 V \equiv	Rated power	110 W	Net Weight	1.6 kg	Size(L/W/H)	280*114*172.5mm
Noise	≤ 78 dB(A)	UV Wave Length	253.7nm	Capacity	0.3L	Flapping Frequency /MINUTE		10400(+/-15%)	

Charging Cable Storage

⚠ Caution

Please keep the charger bottom dry. Pay attention not to be affected by water or any dirt in case of lowering down the user experience, and also pay attention not to press hard or step the charger on feet.

While not using the charger, please keep the charging cable storage as the picture shown.

