



USER MANUAL

Toaster

Model: MT-RP2L09W



Please read the manual carefully before operating your product.
Retain it for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or the base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
16. Do not attempt to dislodge food when toaster is plugged in.
17. A short power-supply cord should be used to reduce the risk resulting from becoming

IMPORTANT SAFEGUARDS

entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

NOTICE:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

General safety Instructions

1. **Please read the operating instructions carefully before using the appliance.**
2. Please keep these instructions, the guarantee slip. The receipt and if possible the box with inner packaging in a safe place!
3. This appliance is intended exclusively for private and not for commercial use.
4. Always remove the plug from the socket when the appliance is not in use or when you are attaching accessories, cleaning it or in the event of a malfunction. Switch off the appliance. Do not pull the cable, pull the plug.
5. Keep children away from the appliance to keep them safe from electric shocks. Make sure that the appliance is out of the reach of children. Ensure that the cable does not hang down.
6. Check the cable and the appliance regularly for damage. Do not switch on the appliance if it is damaged.

IMPORTANT SAFEGUARDS

7. Do not repair the appliance yourself, but consult an authorized professional instead.
8. Keep the appliance and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
9. Never leave the appliance unsupervised if it is use! Always switch off the appliance if you are not using it, even if only for a brief period.
10. Only use original parts.
11. Never use the appliance outside.
12. Never submerge the appliance in water or any other liquid. Do not allow the appliance to come into contact with water or other liquids. Do not use the appliance with wet or moist hands.
13. Remove the plug from the socket immediately if it is moist or wet. Do not touch the water!
14. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard;
15. Only use the appliance for its intended purpose
16. This appliance is not intended for use by persons (including children) with reduced physical. Sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.
18. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
19. The appliances are not intended to be operated by means of an external timer or separate remote-control system
20. After you finish using this product, please recycle the product for disposal in accordance with local regulations.

21. This appliance is intended to be used in household and similar applications such as:
- Staff kitchen areas in shops, office and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - In bed and breakfast type environments;

*) Please observe the following "Special Safety Instructions for this appliance".

Special Safety Instructions for this appliance

1. Only use the appliance if supervised (very dry bread may catch fire if toasted).
2. The metal parts heat up! Danger of burns!
3. The surfaces are liable to get during use.

IMPORTANT SAFEGUARDS

3. Do not insert any forks, knives or such like in the toasting slot.
4. Do not place the appliance anywhere near inflammable objects (e.g. curtains, wood, etc.)!
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

DESCRIPTION OF PARTS



1. BREAD SLOT
2. CANCEL FUNCTION
3. DEFROST FUNCTION
4. REHEAT FUNCTION
5. LOADING HANDLE
6. BROWING CONTROL
7. CRUMB TRAY

Operation

1. Only connect the appliance to a correctly installed safety plug (220-240V 50/60Hz).
2. Turn the selector switch clockwise to set the toasting level from the lightest stage 1 to the darkest stage 6. If in any doubt, start with the lower setting (the black mark on the selector switch shows you the setting).
3. Insert sliced bread into the toasting slot and push down the lever until it locks.
4. The appliance starts toasting. The appliance switches off immediately once the set degree of toasting has been reached. The toast then pops up automatically.
5. The appliance has heat-insulated casing. However, as metal parts still heat up during operation, please allow cooling down before you put it away.
6. The toaster only allowed 2 slices of the toaster to be toasted at a time.
7. The grill is only allowed to adjust to the minimum toast.

Cleaning

- Before cleaning, remove the plug from the socket and allow the appliance to cool down.
- Use a moderately damp cloth to clean the outside of the appliance.
- Do not use any aggressive or scrubbing detergents.
- Grasp the crumb shaft by the loop and pull it out, remove the bread residue and push the shaft back in.

This appliance conforms to the relevant SAA guidelines and has been constructed on the basis of the latest technical safety regulations.

Subject to technical changes!

Product: Toster Model: MT-RP2L09W
220-240V~ / 50/60Hz / 800-950W

